


# COMPACT MITER FENCE – Angular Scale

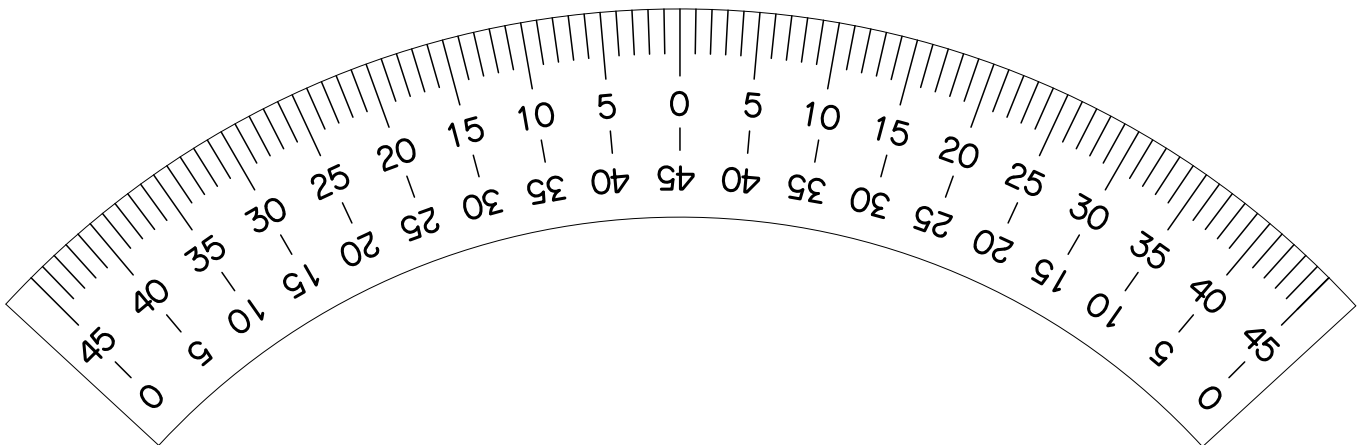

INSTRUCTIONS: Print this page as is. Carefully measure to check the indicated dimension. If the measured and printed values differ you will have to calculate the Scale Factor as the quotient of measured value/175. The result will be an odd number which you must input into the printing program. Repeat the procedure and check again. In some cases it may be necessary to make several tests until the print comes out perfect. Use at least 5 decimal places for the quotient result. Finally print the upper scale only on self-adhesive glossy paper.

